



# Keypad TouchScreen


## User Guide – Simplified Version

Indoor touch keypad to arm/disarm the system, activate Night Mode and, if configured, manage groups. The screen wakes on approach and automatically adjusts its brightness.

## DISARM

### With a code

- 1 Wake the screen (approach or touch the keypad)
- 2 Open the Control tab and select the site or group if there is only one go to the next step
- 3 Press Disarm
- 4 Enter your code and confirm (general, personal or visitor code depending on configuration)

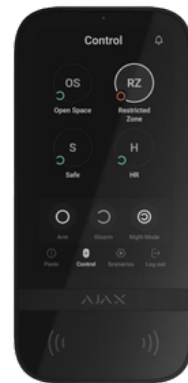

### With a Pass/Tag

- 1 Wake the screen
- 2 Present the Pass/Tag to the keypad's contactless reader
- 3 Choose Disarm on the screen



### With a smartphone (Bluetooth)

- 1 Bring an authorized smartphone close (Bluetooth enabled)
- 2 Follow the on screen prompt and select Disarm



### During the entry delay:


The buzzer may beep until the timer ends. Disarm before the countdown finishes



## ARM

### With a code

- 1 Wake the screen (approach or touch the keypad)
- 2 Open the “Control” tab and select the desired site or group; if there is only one, proceed to the next step.
- 3 Press Arm
- 4 Enter your code and confirm

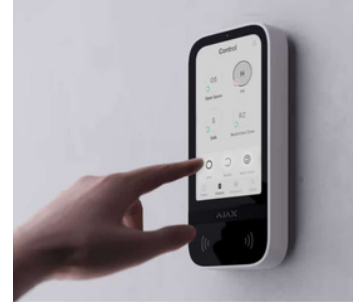

### With a Pass/Tag

- 1 Wake the screen
- 2 Present the Pass/Tag to the keypad's contactless reader
- 3 Choose Arm on the screen



### With a smartphone (Bluetooth)

- 1 Bring an authorized smartphone close (Bluetooth enabled)
- 2 Follow the on screen prompt and select Disarm



### After arming:

The buzzer may beep during the exit delay (if configured). Leave the premises before the end of the delay.



## **MODES & GROUPS**

### **Arm/Disarm a group only**

Control → choose the group → Arm or Disarm

### **Night Mode (partial)**

Control → Night Mode (activates only the areas defined by the installer)

## **ADVICE & SAFETY**

- Indoor use only.
- In case of loss of a badge/Pass or if a code is compromised, request revocation/modification from your administrator (possible remotely).
- Duress code (if enabled): replaces the normal code to apparently disarm the system and send a silent alert to the monitoring center.
- Do not write your codes on this document.